


# STEP-BY-STEP

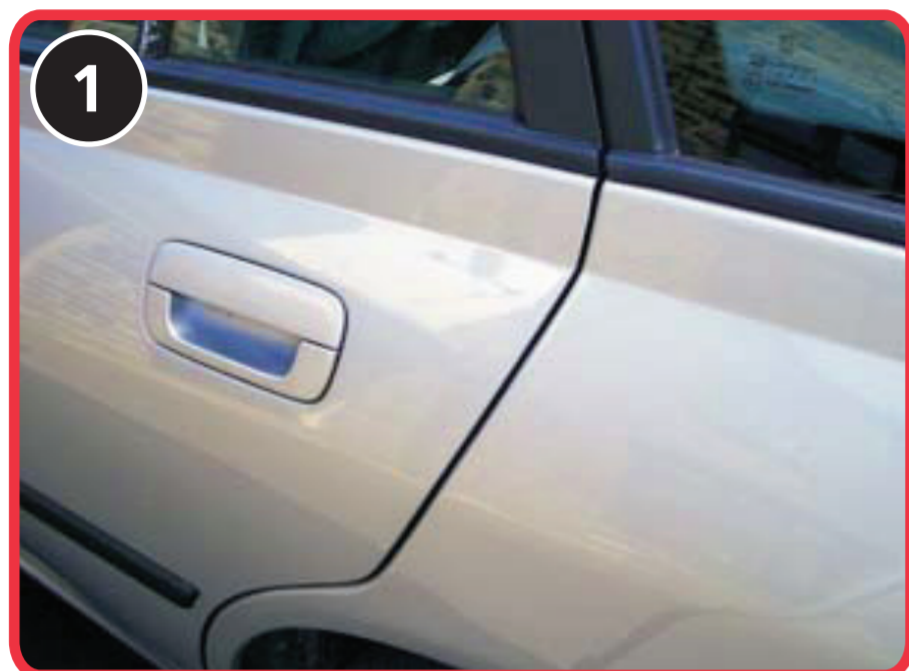

Choose aperture to be masked.



Apply tape behind the door edge taking care to hide the adhesive behind the panel. Leave the adhesive free portion extending beyond the door edge.



Close the door. Adjust the tape into the gap to the required depth.



Prepare the vehicle to be painted.



Once the paint is dry, remove all the masking materials.



Once the tape is removed. Inspect edges and polish if necessary. The result: no extra rework.

# STEP-BY-STEP